


USER MANUAL

AQQA AQUARIUM POWER-DRIVEN BIOCHEMICAL SPONGE FILTER AQ-016

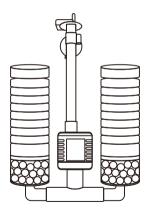

AQQA aquarium power-driven biochemical sponge filter is a type of hanging filer, it is perfect for all types of aquarium tanks and fishes.

1. PRODUCT FEATURES

More efficient and durable: Double ribbing shape sponges design and made of premium materials. Two sponges means more surface area for beneficial bacteria filtering the aguarium water crystal clear. It also can remove the peculiar smell.

Mechanical and biological filtration: Two containers with ceramic pearls and biochemical sponge. Both are easily replaceable.

Increase dissolved oxygen and cultivate beneficial bacterial: Ceramic pearls filtration media will remove harmful substance and increase dissolved oxygen.

Retractable outlet pipe: Convenient to adjust the height of air outlet, in order to meet your requirements.


Easy to set up and clean: It is easy to install this sponge filter and easy to clean all parts of sponge and ceramic pearls. You can also replace the ceramic pearls with other his filter media.

Suitable for shrimp, betta, tropical fish, planted tanks or others

2.PRODUCT SPECIFICATIONS

Size	S	М
Sponge Dimension	1.97"Dx4.33"H	2.36"Dx5.12"H
Inner Diameter of Sponge	0.51"	0.62"
Applicable Tank	<40 Gal	<55 Gal
Power	3W	5W
Cord length	1.7M (5.6FT)	1.7M (5.6FT)
Retractable Outlet Pipe Length	6.1"~9.25"	6.1"~9.25"
Capacity of Ceramic Pearls Container	100ml	200ml

3.PRODUCT DIAGRAM

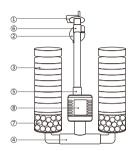

- Retractable outlet pipe
- ② Suction cup
- ③ Biochemical sponge
- 4 T-connector

- (5) Down suction cup joint
- © Up suction cup joint
- (7) Ceramic pearls container
- ® Motor

4.PACKAGE INCLUDED:

- •1x Retractable outlet pipe
- •1x Double sponge filter with media container
- •1x Ceramic pearls
- •2x Suction cup
- •2x Sponge Replacement (In ceramic pearls container)
- •1x User manual

5.METHOD OF APPLICATION

Please install the filter according to the following steps:



- ①.Remove the two sponges from the filter.
- Pull the ceramic pearls container lid out while rotating counterclockwise.
- Remove the two sponge replacements from the ceramic pearls container.
- ④.Open the ceramic pearls package and rinse two sponges, the ceramic pearls and all parts with clean water from tank (Don't rub), in order to remove the any debris or dust and clean the filter. Then soak the two sponges and ceramic pearls in tank water for 10 minutes.
- ⑤ Divide the ceramic pearls in half and pour into the two ceramic pearls containers.
- Secure the lid to the ceramic pearls container well. Secure the two sponges to the filter.
- ⑦-Place the filter on the back wall of the aquarium with two suction cups. Make sure the double sponge filter is oriented vertically, otherwise the pipe will be blocked by the ceramic pearls.

Make sure all the connection is firm! Then plug the power cord.



6.WARNING

- a. Don't use tap water or hot water to clean the biochemical sponge filter. Make sure to clean the filter with tank water.
- c. Make sure the double sponge filter oriented vertically, otherwise the pipe will be blocked by the ceramic pearls.
- d. Clean the filter with tank water every 2 ~ 4 weeks.
- d. We recommend replacing the sponge and ceramic pearls every 5 \sim 6 months.

7.WARRANTY

- 1. 1-year free warranty.
- 2 1-month free return
- 3. Free replacement for 3 months.

Thank you for choosing AQQA, making aquarium keeping easier one product at a time

If you have any problems or suggestions for the power-driven biochemical sponge filter, please contact us by email before leaving feedback or opening a case, it will be the fastest way to solve your problem.

If you are satisfied with the power-driven biochemical sponge filter, please leave positive feedback for our product, in order to let more customers enjoy it. Thanks again!

Company Name: Shenzhen Aiku Pet Technology Co., Ltd

Add: Room 501,No.20,Lane 1,Lishipai,Dafapu Community Bantian Street, Longgang District ,Shenzhen Guangdong, 518000

Email: service@aggapet.com

Email: service@aqqapet.com

Website: http://www.aqqapet.com

Hotline: 888-666-0582(Free call in US)