


AQ116 AQQA aquarium biochemical sponge filter user manual

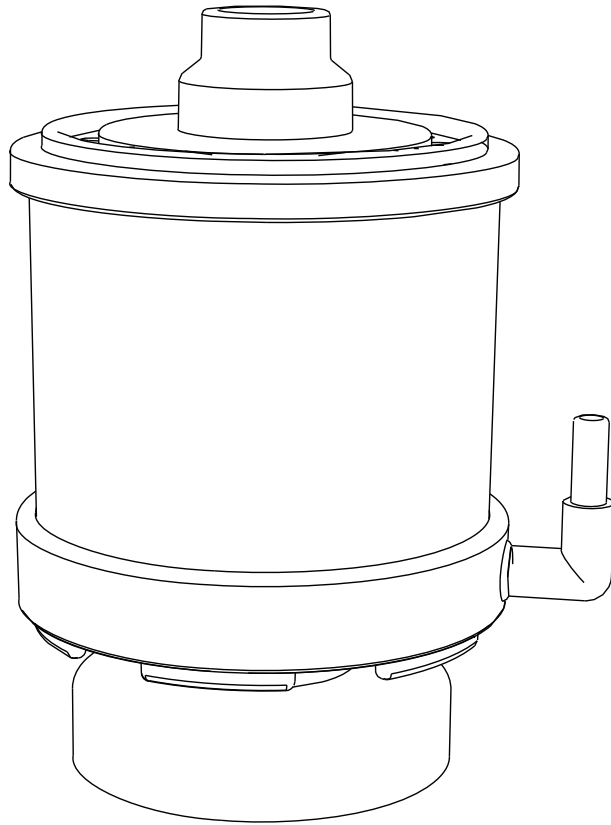


This filter is driven by an air pump(not included)and features high power and low-noise operation according to the airlift principle, which increases the oxygen content of the water. It combines mechanical and biological filtration and works with multi-layered filter media that allow particularly dense colonization of nitrifying bacteria - for clean water and stable water values. It is suitable for keeping, breeding, and hatching ornamental and juvenile fish. It is particularly effective in cultivating seven-colored fairy fish, small fish, and fry.

1.PRODUCT FEATURES

- Increase the oxygen content of the water.
- Low-noise operation and energy-saving.
- The cylindrical filter sponge cleans the aquarium water thoroughly and effectively of impurities.
- Suitable for saltwater aquariums, freshwater aquariums, and planted aquariums.
- The included accessories are compatible and allow flexible use.
- Please operate the filter with an air pump.

2.PRODUCT DIAGRM

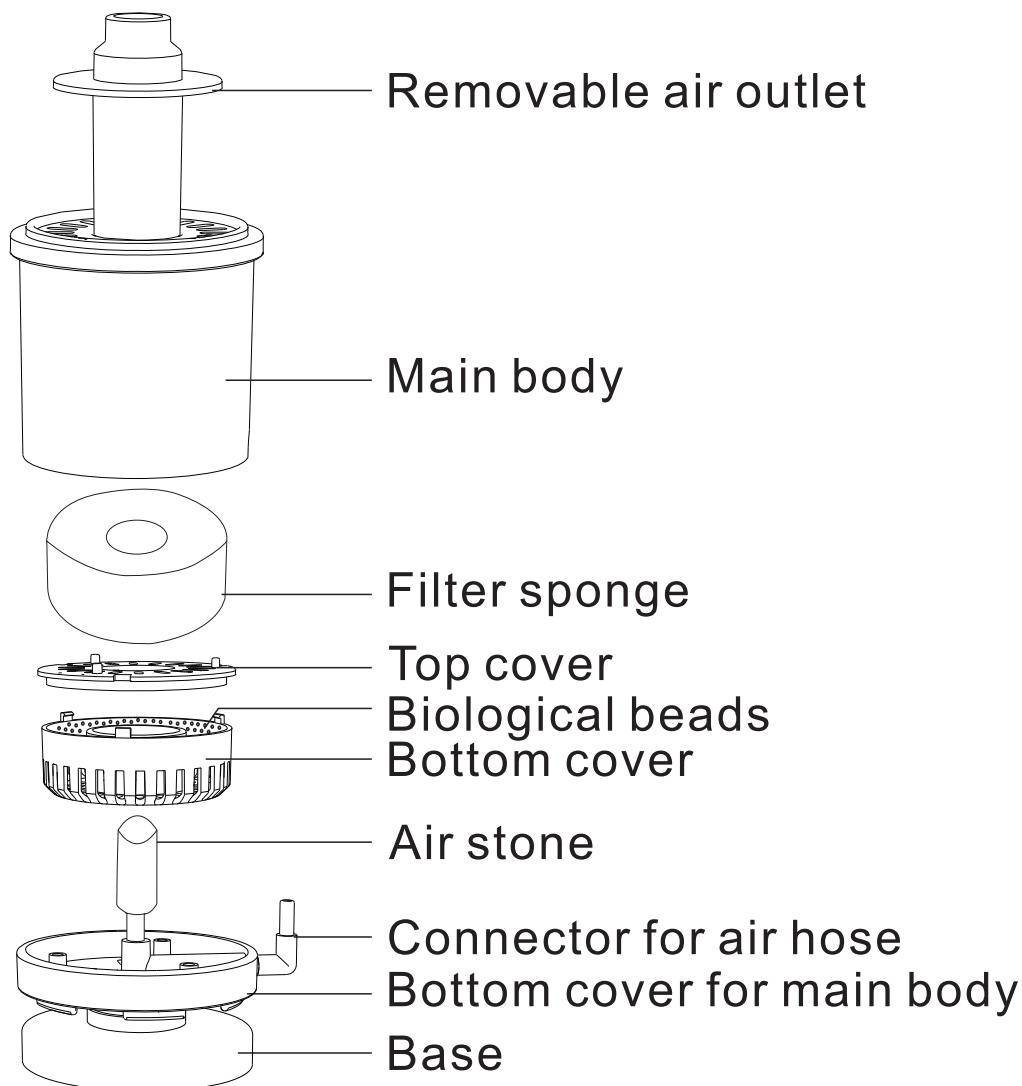


3.PRODUCT SPECIFICATION

Model	AQ116-S	AQ116-M
Product size	3.74*2.6inches 9.5*6.5cm	4.3*3.0inches 11*7.5cm
Suitable tank size	below 15.7inches/40cm	below 25inch/60cm
Material	AS+filter sponge	

4.INSTRUCTIONS

Assembly of filter:

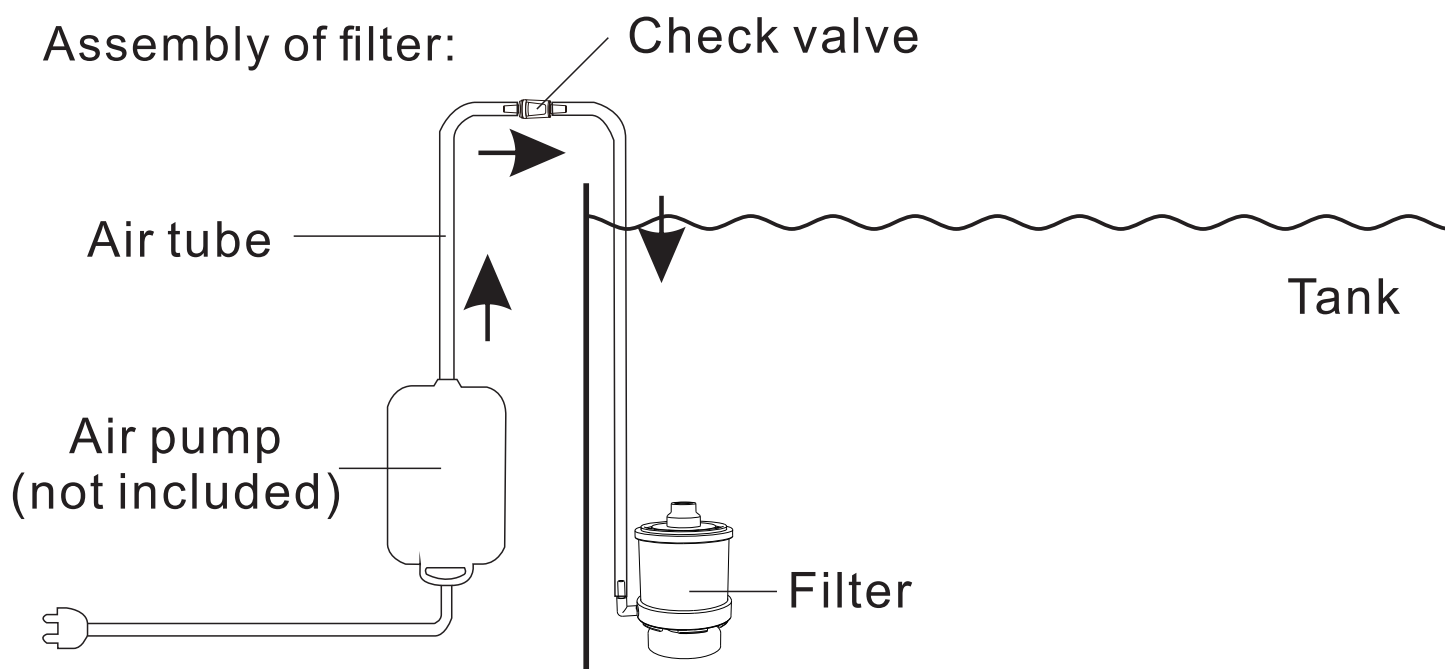

5.DISASSEMBLY METHOD


1. When you use it for the first time, the extra two sponges are placed on top, so please remove them first!
2. Remove the removable air outlet and the black base, and firmly pull off the bottom cover for the main body.
3. After removing the bottom cover, you can replace the filter sponge. For better filtration and even airflow, it is

recommended to clean the Biological beads and air stone regularly.


4. After cleaning, reinstall it according to the previous steps and cover the removable air outlet.

5. Then insert the end of the oxygen hose into the connector for the air hose on the bottom cover of the main body, the outer diameter of the connector for the air hose is 5mm (0.2inch), and then you can use the filter.

Remove the bottom
cover for the main body.

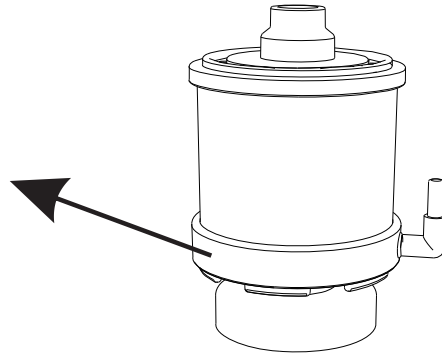

This place is integrated
and cannot be removed.

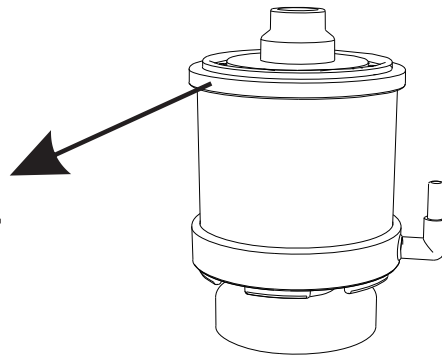

6. ONE YEAR LIMITED WARRANTY

This product **MUST** be purchased from an authorized AQQA reseller. Visit our website for a list of authorized resellers. AQQA warrants this product against defects in materials and workmanship for ONE (1) YEAR from the date of the original retail purchase and is non-transferable.

Warranty on all products, including aquariums. But it is limited to the replacement of the products and does not cover fish loss, personal injury, property loss or direct, incidental or consequential damage caused by using this product.

Note: AQQA One-year Limited Warranty does not cover

damage caused by the followings: improper installation, saltwater corrosion, electrical surges or modifications. Additionally, products that have been refunded are also not covered under the warranty.

If you discover a defect, please contact AQQA, who will, at its option, repair or replace the product at no charge, provided that you return it during the warranty period. A copy of the bill of sale is required as proof of the original purchase date in the event of the product needing repairs within the warranty period. AQQA does not warrant any products that are not AQQA's.

This warranty does not apply if the product has been damaged by accident, abuse, misuse or misapplication, or modified without the written permission of AQQA.

7.CONTACT INFORMATION

Company Name: Shenzhen Aiku Pet Technology Co., Ltd

Add: Room 501, No.20, Lane 1, Lishipai, Dafapu

Community Bantian Street, Longgang District, Shenzhen Guangdong. 518000

Email: service@aqqapet.com

Website: <http://www.aqqapet.com>

Nota: La garanzia limitata di un anno di AQQA non copre i danni causati da: installazione impropria, corrosione causata dall'acqua salata, sbalzi elettrici o modifiche. Inoltre, i prodotti che sono stati rimborsati non sono coperti dalla garanzia. Se noti un difetto, contatta AQQA che a sua discrezione riparerà o sostituirà il prodotto senza alcun costo aggiuntivo, a condizione che il prodotto venga restituito durante il periodo di garanzia. Nel caso in cui il prodotto necessiti di riparazioni durante il periodo di garanzia è necessario presentare una copia della fattura di vendita come prova della data d'acquisto originale. AQQA non garantisce alcun prodotto che non sia di sua proprietà. Questa garanzia non si applica se il prodotto è stato danneggiato in seguito a incidenti, abuso, uso improprio o errata applicazione, o modificato senza il permesso scritto da parte di AQQA.

6. INFORMAZIONI DI CONTATTO

Nome dell'azienda: Shenzhen Aiku Pet Technology Co., Ltd
Aggiungi: Stanza 501, No.20, Corsia 1, Lishipai, Comunità Dafapu
Bantian Street, Longgang District, Shenzhen Guangdong. 518000
Email: service@aqqapet.com
Sito web: <http://www.aqqapet.com>

EC	REP
----	-----

Company Name:E-CrossStu GmbH
Address:Mainzer Landstr.69,Frankfurt am
Main,Hessen,60329
Email:E-CrossStu@web.de
Tel:+49 69332967674

UK	REP
----	-----

Company Name:YH Consulting Limited
Address:C/O YH Consulting Limited Office
147,Centurion House,London Road,Staines
-upon-Thames,Surrey,London,TW18 4AX
Email: H2YHUK@gmail.com
Tel:+44 07514-677868



MADE IN CHINA